


Step 3 - Unlocking the Advanced Features:

Once the license key is received from Red Seal Measurement, return to the ADVANCED FEATURES screen. Select and enter into the REGISTER option.

The top line will display the previously generated CALL IN code and the license E4000 Unlock Code is to be entered on the bottom line using the ^ & > buttons. Press the enter button once the number is entered in its entirety.



If the license E4000 Unlock Code is entered incorrectly, the screen will display "ADVANCED FEATURES (LOCKED)" for approximately 5 seconds. Please verify the code and re-enter.

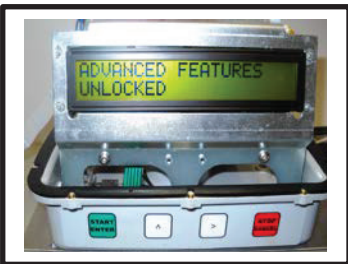

If the license E4000 Unlock Code is entered correctly, the screen will display "ADVANCED FEATURES (UNLOCKED)" for approximately 5 seconds. The screen will return to the top of the W&M menu and the Advanced Feature screen will be hidden.



Advanced Features are disabled:

When Advanced Features are LOCKED the E4k will not log events (power on/off or the status of the covers). Multiple compartments and the manual temperature calibration features will be functional.



Advanced Features are enabled:

The startup message displays NEPTUNE LOCK when the ADVANCED FEATURES (event logging) are enabled.